



Air purifier | 空氣清淨機



JOY S

User Manual | 使用手冊

Blueair JOY S

User Manual
Model: Blueair JOY S

English User Manual
中文版使用手册

04 - 16
17 - 30

SAFETY	04
SYSTEM OVERVIEW	06
WHAT'S IN THE BOX	08
USAGE	09
SETUP	10
ON/OFF AND SPEED CONTROL	11
FILTERS	12
CARE AND MAINTENANCE	15
SPECIFICATIONS	16

General safety instructions

Remember, the JOY S is an electrical appliance. Please read these safety instructions carefully before use and take the necessary precautions to reduce the risk of fire, electric shock or injury. **The JOY S warranty applies only if the unit is used according to these instructions.**



WARNING: Indicates a hazardous situation that, if not avoided, could result in death or serious injury.



CAUTION: Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

General



WARNING:
To avoid hazardous conditions, only the manufacturer, a service center authorized by Blueair or similarly qualified persons shall replace the power cord, if damaged.

CAUTIONS:



- Use the power cable provided with your JOY S unit to plug directly into an appropriate, electrical outlet. (Refer to the rating label on your unit).
- Do not alter the plug in any way.
- Remember to always disconnect the power supply before servicing the unit.
- Do not use the unit if the power cable or plug is damaged or malfunctions in any manner.
- Keep the power cable away from heated surfaces.
- Do not sit on, stand or climb onto the unit or use the unit either as a table or for storage.
- Do not place any objects on top of the unit, block air outlets or intakes, or allow foreign objects to enter the unit as this may cause an electric shock or damage the unit.


Intended use



CAUTIONS:


- Supervise children to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Blueprint


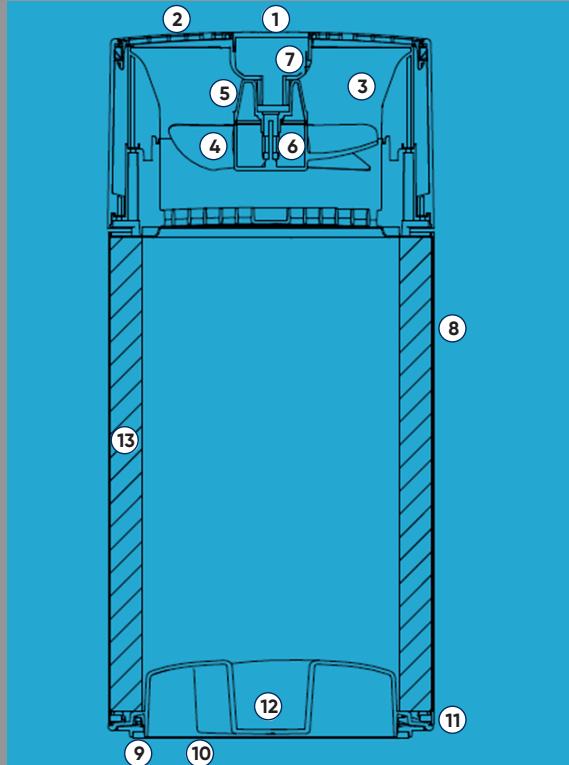


- ① Touch button
- ② Air outlet
- ③ Ion chamber
- ④ Fan blades
- ⑤ Fan holder
- ⑥ Fan motor
- ⑦ PCB (Printed Circuit Board)
- ⑧ Metal Frame
- ⑨ Rubber foot
- ⑩ Bottom lid
- ⑪ Bayonet connection
- ⑫ Locking handle
- ⑬ Main filter (Particle + Carbon filter or Sandwich filter)

JOY S package

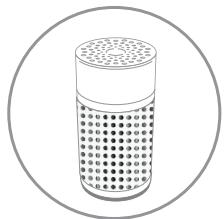

The JOY S air purifier

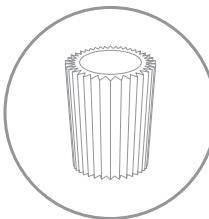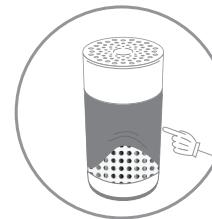Particle + Carbon or
Sandwich filterDark Shadow fabric
pre-filter (accessory)

Options

- Particle + Carbon filter (replacement filter)
- Sandwich filter (replacement filter)
- Choice of color and design for the fabric pre-filter

Placement

Place the JOY S in an upright position on the floor in your room. Be sure to place the unit where it won't be knocked over by any person or pet in the household.

Using the unit in your bedroom?

After 7 seconds the light automatically dims, and speed control goes into sleep mode. When the light is dimmed down, tap once to activate button and tap one more time to change speed.

Placing the unit:



Place the unit in a location where air can circulate freely in, out and around the unit.



Do not place the unit closer than 10 cm (4") from another object.



Do not place the unit directly on or against soft furnishings such as bedding or linen.



Make sure that the unit is placed in an upright position, standing on its circular rubber foot.



Do not place the unit near sources of heat, such as radiators, fireplaces or ovens.




Do not place the unit near wet areas, such as bathrooms or laundry rooms where it may come into contact with water.




Do not place the unit outdoors.

Getting started

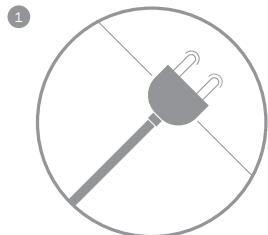


Plug in your JOY S air purifier.

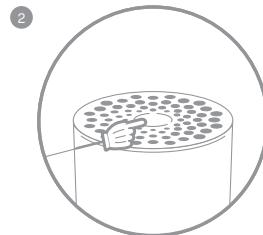

Press the top button to turn the unit on.
Adjust the speed setting to the required level (see "On/off and speed control")

On/off and speed control

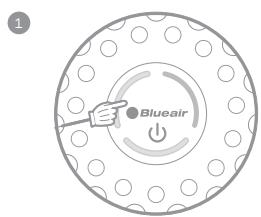


On/Low
Press once to turn the unit on and set it to the recommended energy-efficient speed 1.



Medium
Press twice to set to medium speed 2.



High
Press three times to set to high speed 3.

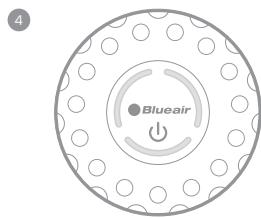

Off
Press a fourth time to turn the unit off.

INFORMATION

The indicator light(s) on the touch button indicate the selected speed 7 seconds. After 7 seconds the light(s) dim down, indicating a deactivated speed control mode.

Press the touch button once to reactivate on/off and speed control. The indicator light(s) light up and you can adjust the speed setting again.

Moreover, JOY S has an Autostart feature. This means that JOY S will automatically restart at the set speed if a power failure occurs, the unit is unplugged or a power switch timer is used.

Filters

General information

The Dark Shadow colored pre-filter is delivered in the package to both enhance the unit's appearance and to initially capture any dust particles.

The main filter removes:



PM2.5*



Dust



Pollen



Pet dander



Mold



Dust mites



Bacteria



VOC



Smoke



Chemicals



Cooking odors

*Particle matter smaller than 2.5 microns


IMPORTANT!

Use only genuine Blueair filters to ensure proper function of your unit and to qualify for full warranty coverage.


Vacuum or wash the pre-filter

Occasionally vacuum the exterior of the fabric pre-filter to remove any dust it has collected.


Always unplug the unit before removing the fabric pre-filter

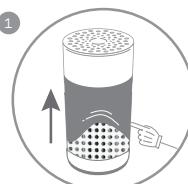


Remove the pre-filter from the unit's metal frame.

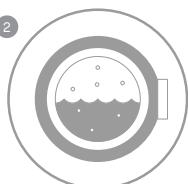

Wash the pre-filter in the washing machine, according to instructions on the pre-filter's label.

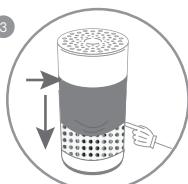


Refit the pre-filter back onto the unit's metal frame by guiding the top elastic end into the slot between the top cylinder and the metal frame.

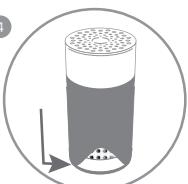


Pull the bottom elastic end of the pre-filter over the bottom edge of the air purifier.


Changing the main filter

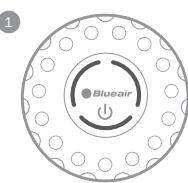

When the indicator lights turn red (after 6 months of operation) it is recommended to change the main filter.

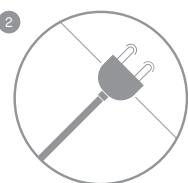


Turn off the unit and unplug it.

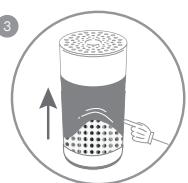


Remove the pre-filter from the unit's metal frame.




Carefully place the unit upside down on a flat surface and open the bottom by rotating it counter-clockwise whilst holding the unit.

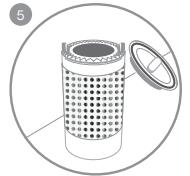


Remove the bottom from the unit.

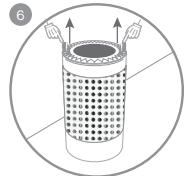

Grip the handles on the main filter and pull upwards to remove the main filter from the unit.

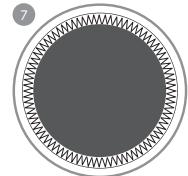


Position the new main filter into the metal frame. Ensure that the filter retains its cylindrical shape by pressing it against the metal frame from inside the unit.

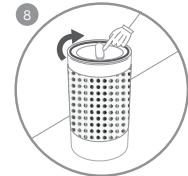

Replace the bottom by gently pushing it down and simultaneously rotating it clockwise to secure it back into the bayonet lock.



Turn the unit back into its correct position and place on the floor (see section "Placement")

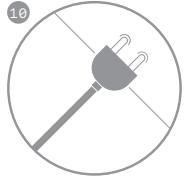

Plug and turn on the JOY S unit.



Press the touch button for a duration of 5 seconds to reset the filter replacement timer. This lets JOY S know that you have changed the filter. The indicator light flashes 3 times, and then changes from red to white.

IMPORTANT!

Use only genuine Blueair filters to ensure proper function of your unit and to qualify for full warranty coverage.

General care

Take good care of your JOY S to ensure that it delivers optimal performance.

- During use, occasionally vacuum the pre-filter to remove dust, or wash it on a gentle, low temperature cycle in the washing machine.
- Change the main filter every six months, depending on the operating conditions. Remember to unplug the unit before changing the main filter.
- Occasionally wipe the top of the unit with a dry dust cloth.

Specifications¹

Room size:	17m ² (185 sq. ft.)			
Clean Air Delivery Rate (CADR)	cfm m ³ /h	Smoke 119 202	Dust 121 205	Pollen 131 222
Filter replacement indicator	Yes			
On/Off timer	No			
Speeds	1-2-3-off			
Dimensions	Height: 433 mm (17 in) Width: 200 mm (7.8 in) Depth: 200 mm (7.8 in) Weight: 2.4 kg (5.29 lbs)			
Air exchange ²	5 per hour (17 m ² or 185 sq.ft.room)			
Power usage ⁴	1.5 - 10 W			
Noise level	17 - 46 dB(A)			
Average filter service life	six months ³			
Warranty	Local regulations			

¹Certified ratings as stated are based on models with Particle+Carbon Filter for JOY S. Ratings may be affected by use of other Blueair filter models.

²Air changes per hour are calculated on the recommended room size, assuming 8-foot (2.4-m) ceilings. For smaller rooms, the air changes per hour will increase.

³Depending on air quality in the area of use, the recommended six-month filter lifetime may vary.

Blueair JOY S

中文版使用手冊
型號：Blueair JOY S

安全資訊	18
細節介紹	20
產品包裝說明	22
使用說明	23
啟動	24
開機/關機和風速控制	25
濾網	26
清潔與保養	29
產品規格	30

安裝前注意事項

Blueair JOY S 空氣清淨機屬於電器產品。請在使用前閱讀安全資訊說明並採取必要預防措施來降低火災、電擊或受傷的風險。Blueair 保固僅限於遵照說明書之使用範圍內適用。



警告：表示危險情況，如果未避免，可能造成死亡或嚴重受傷。



小心：表示危險情況，如果未避免，可能造成輕度或中度受傷。

一般



警告：為避免發生危險狀況，僅限製造商、Blueair 授權服務中心或Blueair 代理或經銷商之專業人士可更換損壞之電源線。



- 勿必使用 JOY S 空氣清淨機隨貨附贈的電源線，並將 JOY S 空氣清淨機連接至符合規格的電源插座。(請參閱空氣清淨機上的額定電壓標籤貼紙)。否則可能導致火災等危險。
- 切勿以任何方式變更插頭。
- 拔除插頭時請握住插頭，如以拉住電源線方式拔除插頭，可能會造成電源線斷裂，導致發生觸電、短路甚至火災的危險。
- 請勿使用多頭電源線插座或與其他電器共同使用電源線，可能會因過熱發生火災的危險。
- 使用電器前請確定插頭與插座緊密貼合，以避免因鬆動或插入不完全，導致發熱產生危險。
- 插頭上若堆積灰塵，容易因濕氣造成絕緣不良，引起火災等危險，故請定期清除插頭上的灰塵。
- 拉扯、踐踏或重壓電源線，將造成電源線破損，並可能發生觸電、短路甚至火災等危險。
- 請勿用沾濕的手觸碰插頭與插座，否則可能發生觸電的危險。
- 遇以下情況請將插頭拔除：長期不使用或外出前、清潔保養或移動機器前、發生異常（例如有燒焦味時）。
- 請注意在對電器進行清潔或保養等相關作業前，須將電器切斷電源。

- 如果電源線或插頭發生任何形式的損壞或故障，請勿使用本空氣清淨機。遇電源線破損或插頭損壞或鬆弛時，若繼續使用，將可能發生觸電、短路甚至火災等危險。
- 電源線請遠離發熱表面。
- 請勿在本空氣清淨機上坐、站或攀爬，或是將本空氣清淨機當作桌子或收納裝置使用。
- 請勿在本空氣清淨機上放置任何物品、阻擋出風口或進風口、或是讓異物進入本空氣清淨機，否則將有可能導致觸電或使本裝置損壞。
- 本產品內含有精密電子零件，請勿用水沖洗，否則可能導致絕緣不良、漏電或短路等危險。
- 請勿在浴室、流理台附近等濕氣多的地方使用，否則可能造成內部機件生鏽、絕緣不良而導致發生觸電、短路等危險。
- 請勿對機體噴灑揮發油、塗料或殺蟲劑，否則可能會引發觸電或火災等危險。
- 請勿在機械油成分浮游處使用機器，因容易造成機體外殼發生龜裂情形，可能產生異味或引起火災等危險。
- 本產品內含精密電子零件、任意拆卸或自行更換機體零件，將造成故障、甚至發生漏電、火災等危險。
- 請勿將機器放置在不平整的地面使用，否則易造成內部機件故障或身體受傷。
- 維修服務需使用原廠零件，如任意更換非公司認可的原廠零組件，以致造成損害，本公司不負保固及損害賠償。
- 當本機器有異常現象發生時，請迅速關閉電源開關，拔掉電源插頭，並立即通知本公司客服單位處理，切勿自行拆修以免發生危險。


適用範圍

- 請勿讓幼兒靠近機體或電源插座，可能造成危險。




- 請注意孩童應受監護，以確保孩童不嬉玩電器。
- 本電器不預期供生理、感知、心智能力、經驗或知識不足之使用者(包含孩童)使用，除非在對其負有安全責任的人員之監護或指導下安全使用。

細節介紹

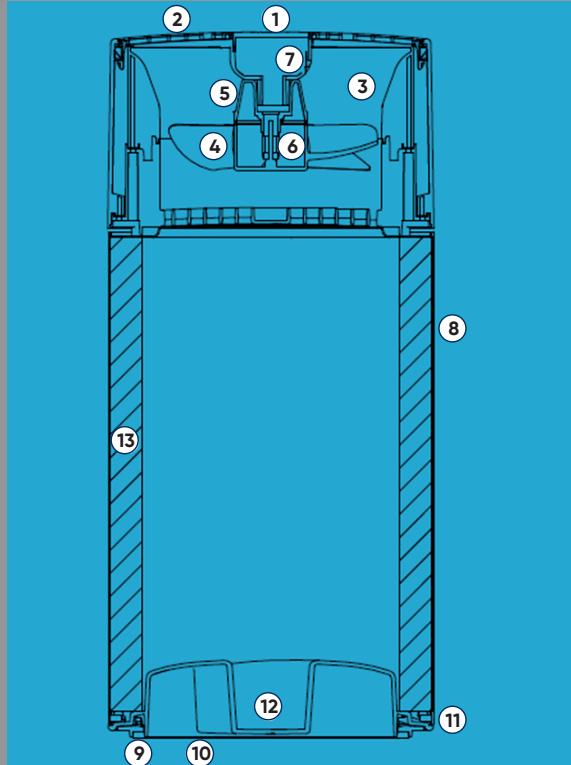


- ① 觸控按鈕
- ② 出風口
- ③ 負離子充電室
- ④ 風扇
- ⑤ 風扇固定座
- ⑥ 風扇馬達
- ⑦ 電路板 (PCB)
- ⑧ 金屬外框
- ⑨ 橡膠圈底墊
- ⑩ 底蓋
- ⑪ 卡榫連接座
- ⑫ 底座把手
- ⑬ 主濾網 (微粒 + 活性碳片濾網)


JOY S 產品包裝說明

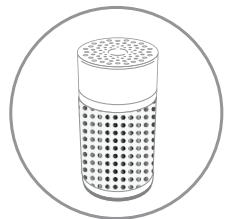

JOY S 空氣清淨機

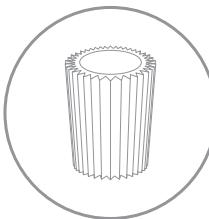

主濾網：微粒+活性碳片濾網

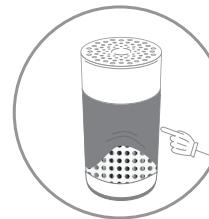

鋼鐵灰 織布前置濾網 (配件)

選配項目 (需額外購買)

- 微粒 + 活性碳片濾網 (更換主濾網)
- 5種顏色織布前置濾網可供選擇

放置

請將 JOY S 直立式平放在平坦的地面上。請確認本空氣清淨機放置地點的周圍不易被家中的人或寵物撞到。

在臥室內使用本空氣清淨機：

7 秒後指示燈會自動熄滅，風速控制隨之進入休眠模式。
指示燈熄滅時，請輕觸控按鈕一次來啟動空氣清淨機，再次輕觸即可調整風速。

位置



將裝置放置在空氣流通處。



切勿將裝置放在散熱器、壁爐或烤箱等熱源附近。



裝置與其他物體間的放置距離切勿低於 10 公分。



切勿將裝置放在可能接觸水的潮濕位置，例如浴室或洗衣室。



切勿將裝置直接放在或靠在室內裝飾品上，例如寢具或亞麻製品上。




切勿將裝置放在室外。




請務必確認本空氣清淨機為直立式放置在專用的圓形橡膠墊上。

啟動

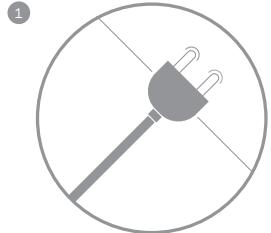


將 JOY S 空氣清淨機接上電源插座。

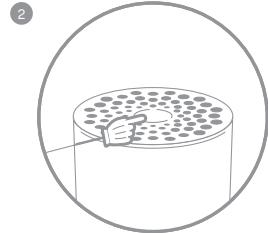


按下頂部的觸控按鈕讓空氣清淨機開始運轉。
將風速設定調整至需求的風速(請參閱「開機/關機和風速控制」)。


開機/關機和風速控制

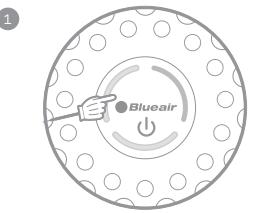


開機/低速
按一下觸控按鈕可開啟本空氣清淨機，並且將本空氣清淨機設定至建議的第一段節能運轉最低速度。

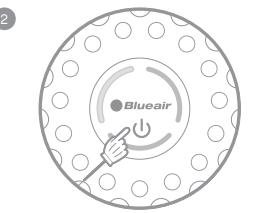

中速
按兩下觸控按鈕可調整為第 2 段中等運轉速度。

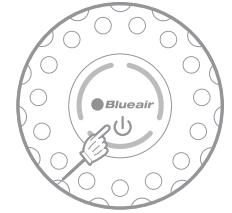

高速
按三下觸控按鈕可調整為第 3 段最高運轉速度。

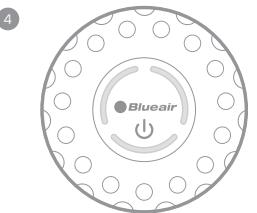

關機
按四下觸控按鈕即可將本空氣清淨機關閉。

資訊
觸控按鈕上的指示燈顯示所選擇的風速，亮起時間為 7 秒鐘，7 秒鐘後指示燈將熄滅，此時處於非調整風速控制模式。
按一下觸控按鈕即可重新啟動「開機/關機和風速控制」。當指示燈亮起時，您就可以重新調整風速。

此外，JOY S 配備自動開機功能，如果發生停電、本空氣清淨機電源插頭被拔掉或不正常跳電後，JOY S 會自動回復之前調整的風速重新開機。

濾網

一般資訊：

空氣清淨機所附的鋼鐵灰色前置濾網，不但可以過濾粉塵微粒，同時能提升空氣清淨的造型美化。

主濾網過濾：



PM2.5*



粉塵



花粉



寵物皮屑



黴菌



塵蟎



細菌



VOC 挥發性有機化合物



煙味



化學物質



油煙

*小於 PM 2.5 的懸浮微粒


重要訊息！

請使用 Blueair 原廠正品濾網才能確保本空氣清淨機的功能正常運作，並享有完整保固服務。


使用吸塵器清潔或用乾淨的水清洗前置濾網

不定期用吸塵器清潔織布前置濾網上殘留過濾的粉塵。


對電器進行清潔或保養等相關作業前，須將電器切斷電源。

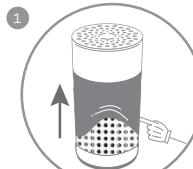


將使用過的前置濾網從本空氣清淨機的金屬外框上拆下。

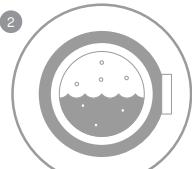

依照前置濾網標籤上的洗滌說明使用洗衣機清洗前置濾網。避免造成金屬生鏽或發霉等狀況，清洗完畢請確實晾乾後才能裝回空氣清淨機。

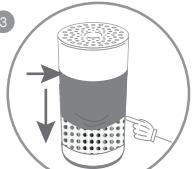

將洗淨的前置濾網裝回本空氣清淨機之金屬外框外，並將前置濾網邊緣的彈性鬆緊帶卡入上方的圓柱體和金屬框架之間的溝槽內。

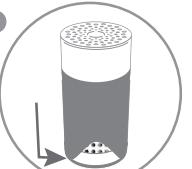


將前置濾網的底側卡入底蓋的邊緣。


更換主濾網



當指示汰換燈亮起紅燈時，建議立即更換主濾網。(使用 $180^\circ \times 24$ 小時後，濾網汰換指示燈將自動亮當提醒，故建議使用6月後更換濾網)。

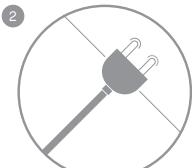


將本空氣清淨機關機後並拔掉電源插頭。

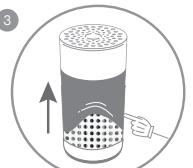


將使用過的前置濾網從本空氣清淨機的金屬外框上拆下。




小心地將本空氣清淨機上下顛倒放置在平坦的表面上，接著一手扶妥本空氣清淨機，另一手以逆時針方向轉動底蓋。

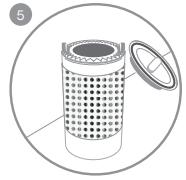


拆除底蓋。

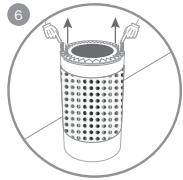

拉住主濾網的兩側把手後向上拉起，將主濾網從空氣清淨機內移除。

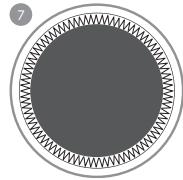


將新的主濾網置於金屬框架內緣，並於空氣清淨機內側將濾網朝金屬框架內按壓，確保濾網固定在圓柱體內。

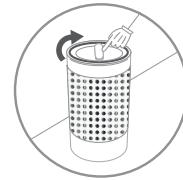


清潔與保養

妥善的清潔與保養，可確保 JOY S 空氣清淨機發揮最高效能。

- 應註明在對電器進行清潔或保養等相關作業前，須將電器切斷電源。
- 在使用過程中，偶爾使用吸塵器清除前置濾網上的粉塵，或利用洗衣機採柔軟、低溫循環模式輕輕地將其清洗乾淨。
- 依據使用狀況，建議每六個月更換主濾網。更換主濾網前，請務必拔掉電源插頭。
- 不定期使用乾的除塵布擦拭空氣清淨機露出的表面。

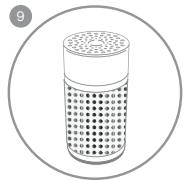

再次將空氣清淨機上下顛倒，直立式的擺正並平放在平坦的地面上（請參閱「放置」章節）。

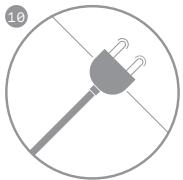

插上電源然後開啟 JOY S 空氣清淨機。



按壓觸控按鈕持續5秒鐘，濾網汰換指示燈將閃爍，閃爍由紅色LED燈轉至白色LED燈後，即完成重置濾網汰換計時。

重要訊息！

請使用 Blueair 原廠正品濾網才能確保本空氣清淨機的功能正常運作，並享有完整保固服務。

產品規格¹

適用坪數：		5 坪 (17 平方公尺)		
清淨空氣輸出率 (CADR)		煙味	粉塵	花粉
cfm m ³ /h		119 202	121 205	131 222
濾網汰換指示燈		有		
開機/關機計時器		無		
風速段位		1-2-3-關機		
尺寸		高度:	43.3 公分	
		寬度:	20公分	
		深度:	20公分	
		重量:	2.4 公斤	
每小時空氣交換率 (ACH) ²		每小時 5 次 (5 坪 或 17 平方公尺)		
功率		1.5 - 10 瓦特		
噪音		17 - 46 分貝		
濾網建議使用時間		6 個月 ³		
保固		1年，官網上完成裝置註冊，即可再享有延長2年保固，共3年。		

¹所標示之效能評價是以使用 JOY S 微粒 + 活性碳片濾網為基準。效能會依使用Blueair 其他類型濾網而有所差異。

²每小時換氣次數的計算係基於建議的空間大小，假設為室內高度為2.4公尺。如果在更小的房間，每小時換氣次數會增加。

³依照使用區域的空氣品質，濾網的使用壽命可能比六個月的建議使用壽命長。

臺灣RoHS/限用物質含有情況標示資訊請參考下列網址：

www.blueair.com/tw-en/rohs/joys



www.blueair.com

Blueair AB

Karlavägen 108
115 26 Stockholm
Sweden
Tel: +46 8 679 45 00
Fax: +46 8 679 45 45
info@blueair.se

Blueair AB Middle East

Jafza One, Office No. AB 1503
Jebel Ali Free Zone
P.O. Box No. 263947
Dubai, United Arab Emirates
Tel: +971 (4) 8821244
salesme@blueair.se

Blueair Asia Ltd.

7fl, Grand Millennium Plaza
181 Queen's Road Central
Central, Hong Kong
Tel: +852 3511 6561
asia@blueair.com

Blueair Inc.

Suite 1900,
100 N LaSalle Street
Chicago, IL 60602
USA
Tel: +1 888 258 3247
Fax: +1 312 727 1153
info@blueair.com

Blueair India Pvt. Ltd.

S-237, Greater Kailash-II
New Delhi - 110048
India
Tel: +91-124-4646119
info@blueair.in
Toll free info number: 18008331188

Blueair (Shanghai) Trading Co. Ltd.

10th floor City Gateway
No. 398 North Caoxi Road
Xuhui Distr, Shanghai,
China
Tel: +86 21 6091 0981
Fax: +86 21 6091 0989
info@blueair.cn